

Gliderol Instructions


Glidermatic GTS

1. Remove the light cover from the motor.
2. Locate the remote programming button on the motor's circuit board. Please refer to the images below for a guide.
3. Press the program button on the motor once and immediately release this button. A red light will illuminate. If the red light does not illuminate beside the button you have just pushed then this is the wrong button.
4. In less than 5 seconds, push and hold *button A* or *button 1* on the new remote.
5. The red light will go out and the remote is coded.



Gliderol GRD

1. Remove the cover from the motor wall unit.
2. Locate the remote programming button on the motor's circuit board. Please refer to the images below for a guide.
3. Press the program button on the motor once and immediately release this button. A red light will illuminate. If the red light does not illuminate beside the button you have just pushed then this is the wrong button.
4. In less than 5 seconds, push and hold *button A* or *button 1* on the new remote.
5. The red light will go out and the remote is coded.

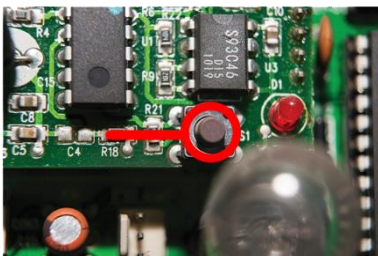

Please note that if you have more than one motor. You will need to use *button A* or *button 1* for all motors. The motor will determine which button on the remote will operate the door.



WARNING!

This product may contain a coin/button cell battery. Keep product and batteries away from children. Battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button battery has been swallowed or placed inside of any part of the body.

