

Liftmaster Instructions

Program the Receiver to Match Additional Remote Control Codes

1. Using the orange "LEARN" button.
2. Press and release the orange "LEARN" button on the motor. The learn indicator light will glow steadily for 30 seconds.
3. Within 30 seconds, press and hold the button on the hand-held remote that you wish to operate your garage door.
4. Release the button when the opener light blinks. It has learned the code. If the light bulb is not installed, 2 clicks will be heard.

Using the Multi-Function Door Control

1. Press and hold the button on the hand-held remote that you wish to operate your garage door.
2. While holding the remote button, press and hold the LIGHT button on the Multi-Function Door Control.
3. Continue holding both buttons while you press the push bar on the Multi-Function Door Control (all three buttons are held).
4. Release buttons when the opener light blinks. It has learned the code. If the light bulb is not installed, two clicks will be heard.

Now the opener will operate when the remote button is pressed. If you release the remote button before the opener light flashes, the opener has not learned the code.

To Erase all Remote Control Codes

1. Press and hold the orange "LEARN" button for approximately 6 seconds on opener until the learn indicator light goes out.
2. All previous codes are now erased. Reprogram each remote or keyless entry you wish to use.



WARNING!

This product may contain a coin/button cell battery. Keep product and batteries away from children. Battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button battery has been swallowed or placed inside of any part of the body.

