

Merlin M832/M842 Instructions

LOCATING THE LEARN BUTTON

On overhead door openers:

- With five exposed terminal screws at the rear
 - Remove the small black cover to the right of the terminal screws
 - Learn is the **RED** button under the black cover
- Learn is the **RED** button under the black cover
 - Learn is the **RED** button under the black cover
 - Find the small button marked "Learn"
- With four covered terminal screws at the rear, and a Merlin wired wall switch
 - The small button on the Merlin wall switch is the Learn button

On roller door openers:

- Single small square **RED** button on the front
 - Remove the lamp cover; remove the small black cover to the left of the lamp holder
 - Learn button is the **RED** button under the black cover
- Large **RED** or **GREEN** push switch on front
 - Remove the **RED** or **GREEN** control panel cover
 - Find the small button marked "Learn"
- Large **RED** or **GREEN** push switch on front and a Merlin wired wall switch
 - The small button on the Merlin wall switch is the Learn button

On other receivers:

- Dark grey boxed receiver with a large round **GREEN** button
 - The Learn button is the small **DARK GREY** button inside the **GREEN** button
- Gate receiver cards
 - The Learn button is the tact switch on the PCB marked "Learn"
- Others
 - See your receiver's user guide, or inspect and find a button marked "Learn"

PROGRAMMING THE NEW REMOTE TO THE OPENER OR RECEIVER

1. Press and hold the Learn button for 1 to 2 seconds.
2. Press the desired button on the remote control which you want to operate the door **twice**.

Programming the remote to control the lamp on your opener (if fitted):

1. Press the desired button for the secondary function.
2. Press and hold the Learn button for 1-2 seconds.
3. Press the desired remove control button once for the main function (open door).
4. Press the desired remove control button once for the secondary function (control lamp).

WARNING!

This product may contain a coin/button cell battery. Keep product and batteries away from children. Battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button battery has been swallowed or placed inside of any part of the body.

