

ATA Instructions

Programming a remote via the motor/receiver


1. Some garage motors have a plastic cover which covers the buttons. Please remove this.
2. Press and hold the blue *Door Code* button on the motor (SW1 or SW2 button for receiver boards). Do not release this button until step 6.
3. Press the new remote's button which you would like to use to control the door for 2 seconds.
4. Release the button on the new remote for 2 seconds.
5. Press the same button on the remote again for 2 seconds.
6. Release the *Door Code* or *SW* button on the motor/receiver.
7. Press the button on the new remote to test operation of the door.

Deleting all remotes from the motor

1. Turn the power off to the motor from the power socket.
2. Press and hold the *Door Code* or *SW1* button on the motor/receiver. Do not release until step 4.
3. Whilst still holding the *Door Code* or *SW1* button, turn the power back on. The *Door Code* LED will illuminate after a few seconds to indicate the memory has been cleared.
4. Release the *Door Code* or *SW1* button.
5. Test your remote to ensure it has been deleted. It should not operate the door.

Programming a new remote to a gate via the original remote

1. Stand within 1-2 metres of your gate's control board.
2. Press the button on your original remote to either open/close the gate.
3. When the door begins to move, immediately insert a pin into the centre coding hole of the original remote.
This is usually located in the centre of the four buttons. The LED light of the remote will illuminate when successfully pressed. Ensure the light is illuminated for at least 2 seconds.
4. Remove the pin from the original remote.
5. On the new remote press and hold the new button you wish to operate the gate for 2 seconds.
6. Release the button for 2 seconds.
7. Press the same button again on the new remote for 2 seconds.
8. Wait 10-15 seconds.
9. Press the button on the new remote to test operation of the gate

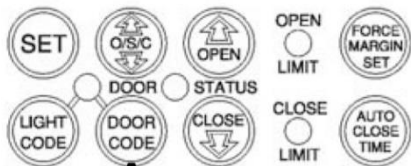

THIS UNIT IS NOT USER SERVICEABLE
DISCONNECT POWER SUPPLY BEFORE
REMOVING COVER.

WARNING!

This product may contain a coin/button cell battery. Keep product and batteries away from children. Battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button battery has been swallowed or placed inside of any part of the body.

